




4-Wire Dual Indicator Gauge


#110019AA 12/24 VDC



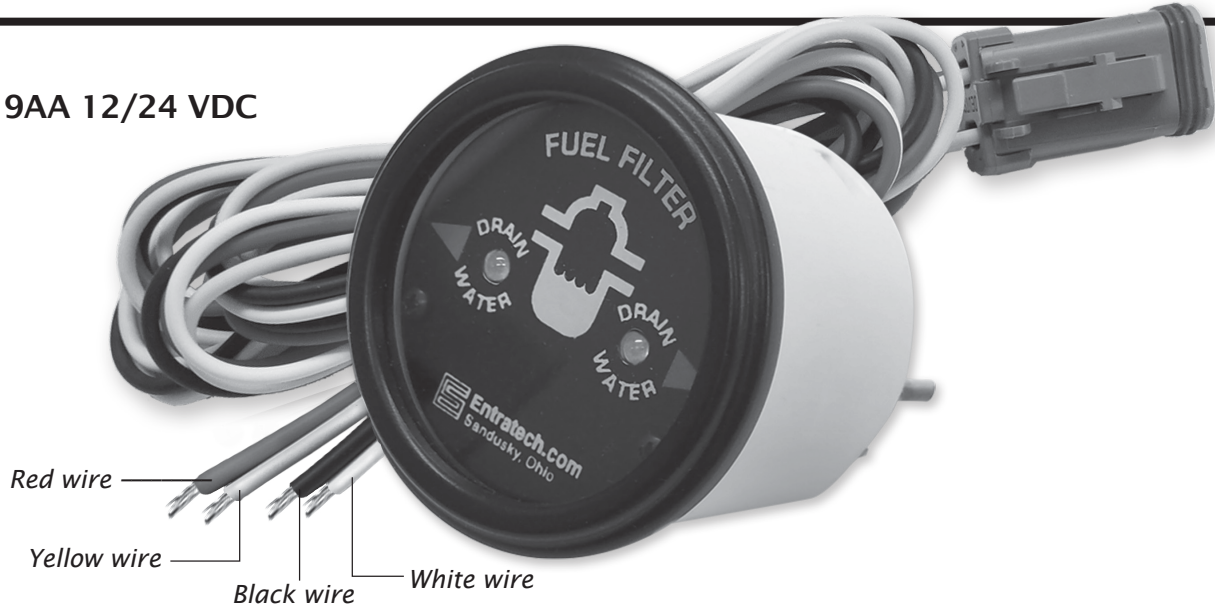




INSTALLATION:

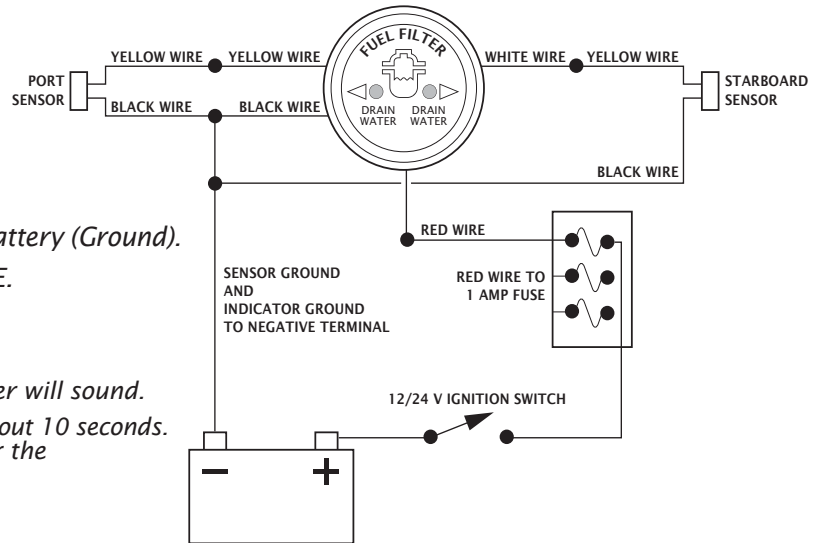1. Connect Wire harness to Gauge
2. YELLOW WIRE from Gauge Harness connects to YELLOW WIRE from PORT Sensor.
3. WHITE WIRE from Gauge Harness connects to YELLOW WIRE from STARBOARD Sensor.
4. BLACK WIRE from Gauge Harness connects to BLACK WIRE from BOTH Sensors to negative terminal on battery (Ground).
5. RED WIRE from Gauge Harness connects to 1 AMP FUSE.

On initial power up there will be a few second "power on" test.
 When water is detected there is a slosh delay for a few seconds.
 Then the blue LED on the gauge will light and the internal beeper will sound.
 To prevent annoying the operator the beeper will shut off after about 10 seconds.
 The Blue LED will continue to stay lit. The system will reset after the ignition switch is turned off.
 All wires are 36 inches 18 gauge GXL.



USE WITH THESE PRODUCTS:

<p>NYLON SENSORS (1/2 x 20 thread)</p> <p>WW002841AA: passive WW002811AA: 82.5K Ω WW002821AA: 220K Ω</p>  <p>HARNESS 2-Wire (TE connector)</p>	<p>NYLON SENSORS (M14 x 2.0 thread)</p> <p>WW002842AA: passive WW002812AA: 82.5K Ω WW002822AA: 220K Ω</p>  <p>HARNESS 2-Wire (TE connector)</p>	<p>STAINLESS SENSOR (1/2 x 20 thread)</p> <p>110006AA: passive RACOR style</p>  <p>HARNESS 2-Wire (DELPHI connector)</p>	<p>STAINLESS SENSORS (1/2 x 20 thread)</p> <p>WW004841AA: passive WW004811AA: 82.5K Ω WW004821AA: 220K Ω</p>  <p>HARNESS 2-Wire (DELPHI connector)</p>	<p>STAINLESS SENSORS (M14 x 2.0 thread)</p> <p>WW004842AA: passive WW004812AA: 82.5K Ω WW004822AA: 220K Ω</p>  <p>HARNESS 2-Wire (DELPHI connector)</p>
--	--	--	--	--

DUAL GAUGE: ES07122022